

**Please install the drivers from the enclosed CD BEFORE you connect the Docking Station to your notebook!**

**Driver installation and operation under Windows 2000 / XP / Vista / 7**

1. Insert the provided CD into your disc drive. If the installation does not start automatically locate and double-click the **Setup.exe** file under **E:\Driver** where E is your CD/DVD drive letter.
2. Please proceed and go through the installation process until it is completed.
3. While Windows configures the DisplayLink core software, your screen(s) may temporarily go black, flicker or flash during this process.
4. When the installation of all drivers is finished the application may prompt you to restart your computer to complete the installation. Please restart your computer regardless if prompted or not.
5. The DisplayLink software automatically checks for updates on the web (like Windows update). Please allow for this when you are prompted from your firewall.
6. Assemble the docking station by sliding the main body onto the base plate to make it self-standing.
7. Plug the power cable of the power adaptor into the DC IN.
8. Connect the docking station to your notebook by USB cable only.
9. Upon connecting the USB cable, your computer will automatically load the drivers, including installing Windows built-in drivers for the USB hub, Ethernet Port and DisplayLink Adapter.
10. A pop-up message will appear in the notification area indicating the installation status. Wait for the final message indicating that all drivers have been installed successfully and the device can be used.
11. A monitor icon will show up in the taskbar on the right. Click this icon to adjust your monitor settings.

Note for Windows Vista and Windows 7: To use the DVI-I monitor adapter of the Docking Station WDDM drivers must be installed for the notebook's graphics adapter. The DisplayLink Software is **not** compatible with XPDM drivers under Windows Vista/7!

**Connecting Devices to the Docking Station:***Ethernet:*

Use an Ethernet cable to connect your network hub, switch or router to the Ethernet port on the docking station.

*Monitor:*

Using an appropriate DVI cable as required by your monitor, connect your monitor to the DVI-I port on the docking station. HDMI, VGA or DP monitors may be connected using appropriate adapters.

**Please note:** If you change the monitor that is connected to the docking station you will need to disconnect and then reconnect your computer from the docking station to transmit the DDC signal from the new monitor to your computer. This will allow you computer to detect the resolutions available from the new monitor. If for any reason the resolutions do not update using this method then please complete the following steps:

1. Right mouse click on your Desktop and select **Properties**
2. Now click **Settings > Advanced > Monitor > Properties > Driver > Update Driver**
3. When the update has finished click **Finish** and then **Close**.
4. Now open the **Adapter** tab and click **List all Modes...**
5. Finally select your preferred resolution from the displayed list

*Audio:*

To connect your speaker/headphones, insert the plug to the green port on the front of the docking station. To connect a microphone, insert the plug to the pink port on the front of the docking station.

Now the installation and connection of devices is complete, you may start using the devices connected to the docking station.

For more detailed information on each port, please refer to the User's Manual on the provided CD-ROM.

