


SD Pro
 SD Plus
 SD Ultra
 SD Gaming
 SD Extreme
 SDHC
 SDHC Ultra
 SDHC Extreme
 SDXC
 SDXC Ultra
 MMC
 MMC HS
 MMC Plus
 Mini SDHC (need Adapter)
 Mini SD (need Adapter)
 MMC Mobile (need Adapter)
 MMC Micro (need Adapter)
 RS MMC (need Adapter)
 RS MMC 4.0 (need Adapter)
 RS MMC Mobile (need Adapter)
 RS MMC HS (need Adapter)
 DV RS MMC (need Adapter)

MS Pro
 MS Pro HS
 MS Pro Ultra II
 MS Pro Extreme
 MS Pro Extreme III
 MS Duo
 MS Duo HS
 MS Pro Duo
 MS Pro Duo HS
 MS Pro Duo Ultra
 MS Pro Duo Ultra II
 MS Duo-ROM
 MS PRO Duo MARK2
 MS Pro-HG Duo HX
 MS Pro-HG Duo
 MS Pro-HG Duo Ultra

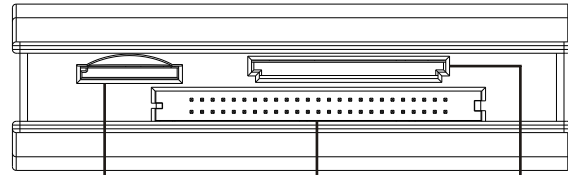

Micro SD (T-Flash)
 Micro SDHC
 Micro SD Ultra
 M2

CF Type I
 CF Ultra
 CF Ultra II
 CF Ultra III
 CF Ultra IV
 CF Extreme
 CF Extreme III
 CF Extreme IV
 CF Extreme Pro
 CF Elite
 CF Elite Pro
 CF Ultimate
 CF Pro
 CF Pro II
 CF Pro III

XD Card
 XD Type H
 XD Type M

**CF Type II and Micro Drive cannot fit