

Final Update : 2008.04.09		Printer Compatibility List			
Printer's Brand	Printer's Type	Print Server Module			
		42374	42393	42392	42375
Avision	MF 3200		•	•	
Avision	MF 3230		•	•	
Brother	HL1260	•		•	•
Brother	MFC4800	•	•	•	•
Brother	MFC4800J	•	•	•	•
Brother	MFC6800	•	•	•	•
Brother	MFC7220	•	•	•	•
Brother	MFC7420	•	•	•	•
Brother	MFC8840D	•	•	•	•
Brother	MFC210C		•	•	
Brother	IntelliFax 2820		•	•	
CANON	S520	•		•	•
CANON	S200SPX		•	•	
CANON	I450		•	•	
CANON	I550		•	•	
CANON	I850		•	•	
CANON	I950		•	•	
CANON	I255		•	•	
CANON	I355		•	•	
CANON	I455		•	•	
CANON	I470D		•	•	
CANON	I475D		•	•	
CANON	I560		•	•	
CANON	I850		•	•	
CANON	I865		•	•	
CANON	I905D			•	
CANON	I6100	•	•	•	•
CANON	I6500	•	•	•	•
CANON	I9100		•	•	
CANON	I9950		•	•	
CANON	IX4000		•	•	
CANON	IX5000		•	•	
CANON	Imageclass D380		•		
CANON	BJ-330	•		•	•
CANON	BJC-620			•	
CANON	BJC4200	•		•	•
CANON	BJC4300	•		•	•
CANON	BJC4550	•		•	•
CANON	BJC4650	•		•	•
CANON	BJF9000		•	•	
CANON	PIXMA ip1000		•	•	
CANON	PIXMA ip1800		•		
CANON	PIXMA ip2000		•	•	
CANON	PIXMA ip3000		•	•	
CANON	PIXMA ip3300		•		

CANON	PIXMA ip3500		•		
CANON	PIXMA ip4000	•	•	•	•
CANON	PIXMA ip4200		•	•	
CANON	PIXMA ip4500		•		
CANON	PIXMA ip5000		•	•	
CANON	PIXMA ip6000		•	•	
CANON	PIXMA ip8500		•	•	
CANON	MP-110		•	•	
CANON	MP-130		•	•	
CANON	MP730		•	•	
CANON	MP770		•	•	
CANON	MX 318		•		
CANON	MX 700		•		
Citizen	GSX230	•		•	•
DATAMAX	I-4208	•		•	•
DATAMAX	I-4308	•		•	•
DOCUJET	1610F	•	•	•	•
DOCUJET	UA1610	•	•	•	•
EPSON	Aculaser C3800		•		
EPSON	Aculaser C9100		•		
EPSON	C750	•	•	•	•
EPSON	LQ-100	•		•	•
EPSON	LQ-300	•		•	•
EPSON	LQ-300+	•		•	•
EPSON	LQ-300+II	•	•	•	
EPSON	LQ-570C	•		•	•
EPSON	LQ-1000C	•		•	•
EPSON	LQ-1170+	•		•	•
EPSON	LQ-1170C+	•		•	•
EPSON	LQ-1170C	•		•	•
EPSON	LQ-2070C	•		•	•
EPSON	LQ-2080C	•		•	•
EPSON	LQ-2090	•		•	•
EPSON	LQ-2090C	•	•	•	
EPSON	LQ-2170C	•		•	•
EPSON	LQ-2180C	•		•	•
EPSON	LQ-2550	•		•	•
EPSON	LQ-3500C	•		•	•
EPSON	LQ-670	•		•	•
EPSON	LQ-680	•		•	•
EPSON	LQ-680C	•		•	•
EPSON	PictureMate PM250		•		
EPSON	STYLUS C20		•	•	
EPSON	STYLUS C40		•	•	
EPSON	STYLUS C41UX		•	•	
EPSON	STYLUS C43UX		•	•	
EPSON	STYLUS C45		•	•	
EPSON	STYLUS C59		•		
EPSON	STYLUS C60	•	•	•	•
EPSON	Stylus C63	•	•	•	•
EPSON	Stylus C67	•	•	•	•

EPSON	Stylus C79		•		
EPSON	Stylus C83	•		•	•
EPSON	Stylus C90		•		
EPSON	Stylus Color 400	•		•	•
EPSON	Stylus Color 600	•		•	•
EPSON	Stylus Color 670	•	•	•	•
EPSON	Stylus Color 800	•	•	•	•
EPSON	Stylus Color 810	•	•	•	•
EPSON	Stylus Color 850	•	•	•	•
EPSON	Stylus Color 900		•	•	
EPSON	Stylus Color 1160		•	•	
EPSON	Stylus Color 1520		•	•	
EPSON	Stylus CX-1500		•	•	
EPSON	Stylus CX-2900		•	•	
EPSON	Stylus CX-3500		•	•	
EPSON	Stylus CX-3700		•	•	
EPSON	Stylus CX-3900		•	•	
EPSON	Stylus CX-4100		•	•	
EPSON	Stylus CX-4700		•	•	
EPSON	Stylus CX-4900		•	•	
EPSON	Stylus CX-5300		•	•	
EPSON	Stylus CX-5500		•	•	
EPSON	Stylus CX-5900		•	•	
EPSON	Stylus CX-6900F		•	•	
EPSON	Stylus CX-7300		•	•	
EPSON	Stylus CX-7800		•	•	
EPSON	Stylus CX-8300		•	•	
EPSON	Stylus Pro 7600	•	•	•	•
EPSON	Stylus Photo 915		•	•	
EPSON	Stylus Photo 1270	•	•	•	•
EPSON	Stylus Photo 1290		•	•	
EPSON	Stylus Photo 1390		•		
EPSON	Stylus Photo 2100		•	•	
EPSON	Stylus Photo 710		•	•	
EPSON	Stylus Photo 720		•	•	
EPSON	Stylus Photo 790		•	•	
EPSON	Stylus Photo 810	•	•	•	•
EPSON	Stylus Photo 830U		•	•	
EPSON	Stylus Photo 900	•	•	•	•
EPSON	Stylus Photo 915		•	•	
EPSON	Stylus Photo EX2	•	•	•	•
EPSON	Stylus Photo EX3	•	•	•	•
EPSON	Stylus Photo R1800	•	•	•	•
EPSON	Stylus Photo R210		•	•	
EPSON	Stylus Photo R230		•	•	
EPSON	Stylus Photo R250		•	•	
EPSON	Stylus Photo R270		•	•	
EPSON	Stylus Photo R310		•	•	
EPSON	Stylus Photo R350		•	•	
EPSON	Stylus Photo R2400		•	•	

EPSON	Stylus Photo RX 430		•	•	
EPSON	Stylus Photo RX 510		•	•	
EPSON	Stylus Photo RX 530		•	•	
EPSON	Stylus Photo RX 590		•	•	
EPSON	Stylus Photo RX 630		•	•	
EPSON	Stylus Photo RX 650		•	•	
EPSON	Stylus Photo RX 690		•	•	
EPSON	ACULASER C1900	•	•	•	•
EPSON	EPL5700	•		•	•
EPSON	EPL5800	•	•	•	•
EPSON	EPL5900	•	•	•	•
EPSON	EPL6100	•	•	•	•
EPSON	EPL6200	•	•	•	•
EPSON	EPL-N2120	•		•	•
EPSON	LP2500		•	•	
EPSON	LP8900		•	•	
EPSON	TM T88III	•		•	•
FUJITSU	DL-700	•		•	•
FUJITSU	DL-900	•		•	•
FUJITSU	DL-3400	•		•	•
FUJITSU	DL-3800	•		•	•
FUJITSU	DL-3850	•		•	•
FUJITSU	DL-5800	•		•	•
FUJITSU	DL-6400Pro	•		•	•
FUJITSU	DL-6800	•		•	•
FUJITSU	FP 410	•		•	•
FUJITSU	Jet Wind 500C	•		•	•
FUJITSU	PP 10	•		•	•
FUTEK	F8000	•		•	•
FUTEK	F84+	•		•	•
FUTEK	F86+	•		•	•
HP	Color Laserjet 2605	•	•	•	•
HP	Color Laserjet 2700N		•	•	
HP	Color Laserjet 3700	•	•	•	•
HP	DeskJet 400	•		•	•
HP	DeskJet 450C	•	•	•	•
HP	DeskJet 500	•		•	•
HP	DeskJet 670C	•		•	•
HP	DeskJet 680C	•		•	•
HP	DeskJet 720C	•		•	•
HP	DeskJet 810C	•	•	•	•
HP	DeskJet 830C	•	•	•	•
HP	DeskJet 845C		•	•	
HP	DeskJet 920C	•		•	•
HP	DeskJet 930C	•		•	•
HP	DeskJet 948C	•	•	•	•
HP	DeskJet 970CXI	•	•	•	•
HP	DeskJet 1120C	•		•	•
HP	DeskJet 1125C	•	•	•	•
HP	DeskJet 1180C	•	•	•	•
HP	DeskJet 1220C		•	•	

HP	DeskJet 1280	•	•	•	•
HP	DeskJet 3325		•	•	
HP	DeskJet 3420		•	•	
HP	DeskJet 3535		•	•	
HP	DeskJet 3743		•	•	
HP	DeskJet 3748		•	•	
HP	DeskJet 3650		•	•	
HP	DeskJet 3820	•	•	•	•
HP	DeskJet 3920		•	•	
HP	DeskJet 3940		•	•	
HP	DeskJet 5440		•	•	
HP	DeskJet 5500	•		•	•
HP	DeskJet 5550	•	•	•	•
HP	DeskJet 5652	•	•	•	•
HP	DeskJet 9300	•	•	•	•
HP	DeskJet 9600	•	•	•	•
HP	DeskJet 9650	•	•	•	•
HP	DeskJet 9800	•	•	•	•
HP	DeskJet D2460		•		
HP	Business Inkjet 1000		•	•	
HP	Designjet 100	•	•	•	•
HP	Designjet 600	•		•	•
HP	Designjet 650C	•		•	•
HP	Designjet 700	•		•	•
HP	Designjet 750C+	•		•	•
HP	LaserJet 1022		•	•	
HP	LaserJet 1022N		•	•	
HP	LaserJet 1100	•		•	•
HP	LaserJet 1160	•	•	•	•
HP	LaserJet 1200	•	•	•	•
HP	LaserJet 1220	•	•	•	•
HP	LaserJet 1300	•	•	•	•
HP	LaserJet 1320	•	•	•	•
HP	LaserJet 2100	•		•	•
HP	LaserJet 2200	•		•	•
HP	LaserJet 2200D	•	•	•	•
HP	LaserJet 2300	•	•	•	•
HP	LaserJet 2410	•	•	•	•
HP	LaserJet 2420	•	•	•	•
HP	LaserJet 2500	•	•	•	•
HP	LaserJet 2550	•	•	•	•
HP	LaserJet 3015	•		•	•
HP	LaserJet 3050		•	•	
HP	LaserJet 3055		•		
HP	LaserJet 3020		•		
HP	LaserJet 3200	•	•	•	•
HP	LaserJet 3330	•	•	•	•
HP	LaserJet 3380		•	•	
HP	LaserJet 4000	•		•	•
HP	LaserJet 4050	•		•	•
HP	LaserJet 4100	•		•	•

HP	LasetJet 4250	•	•	•	•
HP	LasetJet 4300	•	•	•	•
HP	LaserJet 4500	•		•	•
HP	LasetJet 4650	•	•	•	•
HP	LasetJet 5000	•	•	•	•
HP	LasetJet 5000LE	•		•	•
HP	LasetJet 5100LE	•		•	•
HP	LaserJet 6P	•		•	•
HP	LaserJet 8100	•		•	•
HP	LaserJet 1005 MFP		•	•	
HP	Photosmart 2610		•	•	
HP	Photosmart 7150		•	•	
HP	Photosmart 7550		•	•	
HP	Photosmart 7830		•	•	
HP	Photosmart C3180		•	•	
HP	Photosmart D5160		•	•	
HP	Photosmart D7160		•	•	
HP	PSC 1315		•	•	
HP	PSC 1350		•	•	
HP	PSC 1410		•	•	
HP	PSC 1610		•	•	
HP	PSC 2210		•	•	
HP	PSC 2310		•	•	
HP	OfficeJet 4255		•	•	
HP	OfficeJet 5510		•	•	
HP	OfficeJet 5610		•	•	
HP	OfficeJet 6210		•	•	
HP	OfficeJet 7210		•	•	
HP	OfficeJet K850	•	•	•	•
HP	OfficeJet Pro K5300		•	•	
HP	OfficeJet Pro K550		•	•	
IBM	Infoprint 20	•		•	•
IBM	Infoprint 1116	•	•	•	•
IBM	Infoprint 1312	•	•	•	•
IBM	Infoprint 1316	•	•	•	•
IBM	Infoprint 1332	•	•	•	•
IBM	Infoprint 1412	•	•	•	•
Konica Minolta	DI 152	•		•	•
Konica Minolta	DI 250	•		•	•
Konica Minolta	Pagepro 1300W	•	•	•	•
Konica Minolta	Pagepro 1350W	•	•	•	•
Konica Minolta	Pagepro 1380MF		•	•	
Konica Minolta	Pagepro 9100		•	•	
Konica Minolta	Magicolor 2400		•	•	
Konica Minolta	Magicolor 2450	•	•	•	•
Konica Minolta	Magicolor 5450	•	•	•	•
Konica Minolta	Magicolor 7300		•	•	
Kyocera	FS-1010	•	•	•	•
Kyocera	FS-1010KX		•	•	
Kyocera	FS-1020	•	•	•	•

Kyocera	FS-1920	•	•	•	•
Kyocera	FS-720	•	•	•	•
Kyocera	FS-820	•	•	•	•
Kyocera	FS-920	•	•	•	•
Kyocera	FS-6020	•	•	•	•
Kyocera	KM-1635		•	•	
LEXMARK	E210	•	•	•	•
LEXMARK	E322	•	•	•	•
LEXMARK	Optra S1250	•		•	•
LEXMARK	T420	•	•	•	•
LEXMARK	T620	•	•	•	•
LEXMARK	C720	•		•	•
LEXMARK	C750	•	•	•	•
LEXMARK	W812	•	•	•	•
LEXMARK	Z43	•	•	•	•
LEXMARK	Z45		•	•	
LEXMARK	Z55	•	•	•	•
LEXMARK	Z615		•	•	
LEXMARK	Z705	•	•	•	•
LEXMARK	Z42		•	•	
LEXMARK	Z515	•	•	•	•
LEXMARK	X6170		•	•	
MITAC	MP-6600C	•		•	•
NEC	Pinwriter P2200	•		•	•
NEC	Pinwriter P3200	•		•	•
NEC	Pinwriter P5300	•		•	•
NEC	PINWRITER P8000C	•		•	•
OKI	Microline 391	•		•	•
OKI	C3200		•	•	
OKI	B4350	•	•	•	•
RICOH	NF3570	•		•	•
PANASONIC	KX-P1121	•		•	•
PANASONIC	KX-P1123	•		•	•
PANASONIC	KX-P1124	•		•	•
PANASONIC	KX-P1624	•		•	•
PANASONIC	KX-P6500	•		•	•
SAMSUNG	ML-1520		•	•	
SAMSUNG	ML-1710	•	•	•	•
SAMSUNG	ML-1750	•	•	•	•
SAMSUNG	ML-2010		•		
SAMSUNG	ML-2250	•	•	•	•
SAMSUNG	ML-2550	•	•	•	•
SAMSUNG	CLP 500	•	•	•	•
SAMSUNG	CLP 510	•	•	•	•
SAMSUNG	SRP 270	•		•	•
SAMSUNG	SCX-4016	•	•	•	•
SAMSUNG	SCX-4100	•	•	•	•
Sharp	AR-255	•		•	•
Sharp	AR-265FG	•		•	•
Sharp	AR-M 160	•	•	•	•
Sharp	AR-M 205	•	•	•	•

Sharp	AR-M 207	•	•	•	•
Sharp	AR-M 235	•	•	•	•
Sharp	AR-M 275	•	•	•	•
Sharp	AR-M 350	•	•	•	•
Sharp	AR-M 351U		•	•	
Sharp	AR-M 400	•	•	•	•
Sharp	AR-M 450	•	•	•	•
STAR	NX-2420	•		•	•
TOSHIBA	E-161	•		•	•
TOSHIBA	Estudio-25	•		•	•
XEROX	Phaser 3310	•	•	•	•
XEROX	Able 3321	•		•	•
XEROX	Docuprint 240A	•	•	•	•